



Graver Technologies

Filtration | Separation | Purification

High Flow Series Filter Cartridges

Large Geometry Pleated Filters for High Flow

Graver High Flow Series filters feature a larger geometry to handle higher flows with fewer filter elements. The result is much faster, easier filter changeouts. In addition, the inside to outside flow allows for excellent dirt holding capacity, extending the time between filter changeouts. Filter housings are also available and because of the filters high flow and dirt holding capacity, smaller systems are possible, reducing upfront capital costs.

Features - Benefits

- 6" diameter, large geometry for high flow rates
- Absolute retention ratings from 1 to 100 microns
- Capable of flow rates up to 500 GPM in a single 60" element
- Inside-out flow retains contaminant even during changeout
- Multi layer pleated construction with optimized surface area
- Outer cage prevents media extrusion problem experienced with some competitive offerings
- Unique Quad Seal gasket provides maximum seal integrity
- Retrofits competitive high flow filter housings
- Thermally bonded construction

Product Specifications

Media/Support/Cage: Polypropylene

End caps: Polypropylene

O-rings: EPDM, Silicone, Buna-N, Viton

Micron ratings: 1, 3, 5, 10, 20, 40, 60, 100 μ m

Dimensions

Nominal lengths: 20", 40", 60"
(50.8, 101.6, 152.4 cm)

Outside diameter: 6.0" (15.2 cm)

Surface area: 24 ft². (2.2 m²) per 20" element
49 ft². (4.6 m²) per 40" element
73 ft². (6.8 m²) per 60" element


Operating Parameters

Maximum operating temperature: 180°F @ 20 psid (82°C @ 1.4 bar)
160°F @ 30 psid (71°C @ 2.1 bar)
77°F @ 50 psid (25°C @ 3.4 bar)

Recommended changeout differential pressure: 35 psid (2.4 bar)

Maximum flow rates*: 60" element up to 500 GPM (1892 lpm)
40" element up to 350 GPM (1325 lpm)
20" element up to 175 GPM (662 lpm)

* Consult factory for sizing assistance based on particle loads.

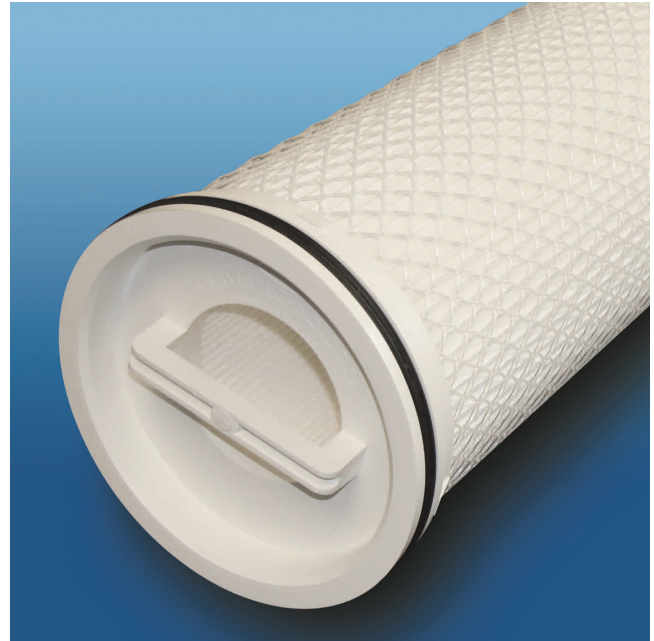

Certifications

FDA Listed Materials - All Materials comply with FDA Title 21 of the Code of Federal Regulations Sections 174.5, and 177.1520, as applicable for food and beverage contact.

NSF 61 - Certified to NSF/ANSI STD 61 for materials requirements only - Component.



Certified to NSF/ANSI Standard 61 for materials requirements only.

COMPONENT

Typical Applications

- Water Systems
- Chemicals
- Food and Beverage
- Pre RO

High Flow Nomenclature Information

High Flow	5	-60	E
Filter Type High Flow Series Filters	Retention Rating (microns) 1 20 3 40 5 60 10 100	Length (inches) -20 -40 -60	O-Ring S Silicone B Buna-N E EPDM V Viton

Example: HF 5-60E

High Flow Pressure Drop

Micron	Element Pressure Drop psid/gpm			Element Pressure Drop Mbar/M ³ /Hr		
	20"	40"	60"	20"	40"	60"
1	0.0200	0.0097	0.0065	6.0845	2.9395	1.9820
3	0.0167	0.0081	0.0054	5.0705	2.4495	1.6516
5	0.0076	0.0037	0.0025	2.3179	1.1198	0.7550
10	0.0046	0.0022	0.0015	1.3908	0.6719	0.4530
20	0.0021	0.0010	0.0007	0.6374	0.3079	0.2076
40	0.0017	0.0008	0.0006	0.5215	0.2520	0.1699
60	0.0015	0.0007	0.0005	0.4552	0.2199	0.1483
100	0.0010	0.0005	0.0003	0.3035	0.1466	0.0989

Note: For chemical compatibility, flow rates, and temperature requirements please consult the factory or your local Graver distributor.

Removal Efficiency

Micron Rating Beta Ratio	99.9% Beta 1000	99% Beta 100	90% Beta 10
1 micron	1	0.6	0.2
3 micron	3	2	1.5
5 micron	5	4	3
10 micron	10	8.5	6.5
20 micron	22	19	14
40 micron	38	18	15
60 micron	60	35	20
100 micron	100	75	45

$$\text{Beta Ratio} = \frac{\text{Upstream particle counts}}{\text{Downstream particle counts}}$$

The micron ratings shown at various efficiency and beta ratio value levels were determined through laboratory testing, and can be used as a guide for selecting cartridges and estimating their performance. Under actual field conditions, results may vary somewhat from the values shown due to the variability of filtration parameters.

Testing was conducted using the single-pass test method, water at 3 gpm/10" cartridge. Contaminant's included latex beads, coarse and fine test dust. Removal efficiencies were determined using dual laser source particle counters.

For more information

Graver Technologies Customer Service: **1-888-353-0303**

Technical Support: **1-888-353-0303**

E-mail us at **info@gravertech.com**

Graver Technologies Europe (UK): **+44-1424-777791**

DISTRIBUTED BY:

All information and recommendations appearing in this bulletin concerning the use of products described herein are based on tests believed to be reliable. However, it is the user's responsibility to determine the suitability for his own use of such products. Since the actual use by others is beyond our control, no guarantee, expressed or implied, is made by Graver Technologies as to the effects of such use or the results to be obtained. Graver Technologies assumes no liability arising out of the use by others of such products. Nor is the information herein to be construed as absolutely complete, since additional information may be necessary or desirable when particular or exceptional conditions or circumstances exist or because of applicable laws or government regulations.



Graver Technologies

200 Lake Drive
Glasgow,
DE 19702 U.S.A.

302-731-1700
800-249-1990
Fax: 302-369-0938

e-mail: info@gravertech.com
web site: www.gravertech.com

